

**KTM 1290 SUPER ADVENTURE-R-S-T '15- /
1190 ADVENTURE '13- / 1090 ADVENTURE-R '13- /
1050 ADVENTURE '15-**

REF 9623

DEFLECTORES LATERALES - SIDE DEFLECTORS - SEITEN DEFLEKTORS




ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Deflector derecho	Right deflector	1	9623WM3
2		Deflector izquierdo	Left deflector	1	9623WM3
3		Soporte metálico derecho (R)	Right metal support (R)	1	SOPOR-2P-14-9623
4		Soporte metálico izquierdo (L)	Left metal support (L)	1	SOPOR-2P-14-9623
5		Tornillo ISO 7380 M4x10	M4x10 ISO7380 allen screw	6	TORNI-I7380-645
6		Arandela nylon M4x0.5	M4x0.5 nylon washer	12	ARNV00000000311
7		Arandela de goma Ø4,5x Ø11,5 x 2	Ø4,5x Ø11,5 x 2 rubber washer	4	ARAND-EPDM--722
8		Tornillo Allen M5x20 Ø11 ISO 7380	M5x20 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-730
9		Tornillo Allen M5x25 Ø11 ISO 7380	M5x25 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-766
10		Casquillo Ø8,5 x Ø14 x 6	Ø8,5 x Ø14 x 6 arrowhead	2	CASQUI-----208
11		Casquillo Ø8,5 x Ø14 x 9	Ø8,5 x Ø14 x 9 arrowhead	2	CASQUI_____0100

**KTM 1290 SUPER ADVENTURE-R-S-T '15- /
1190 ADVENTURE '13- / 1090 ADVENTURE-R '13- /
1050 ADVENTURE '15-**

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

**DISASSEMBLY
DESMONTAJE**

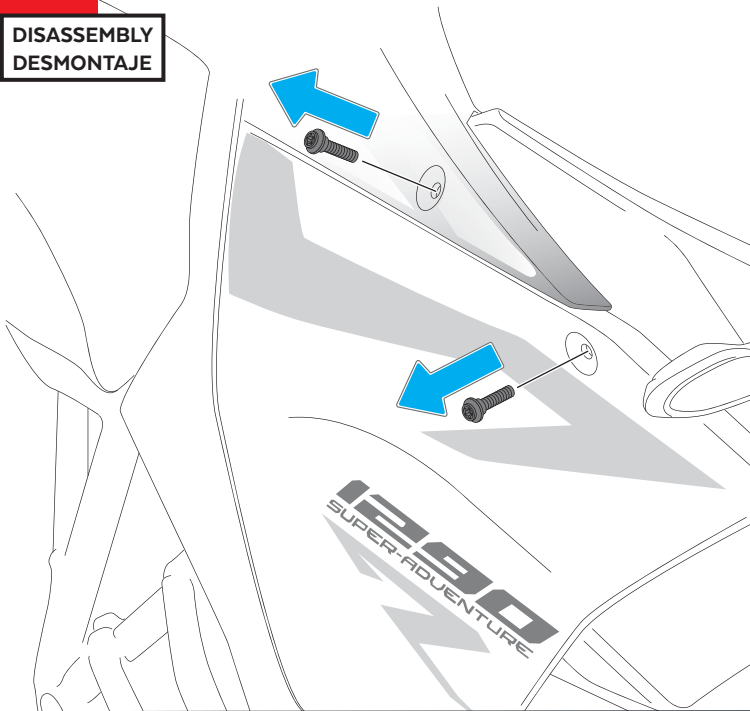


2

**ASSEMBLY
MONTAJE**

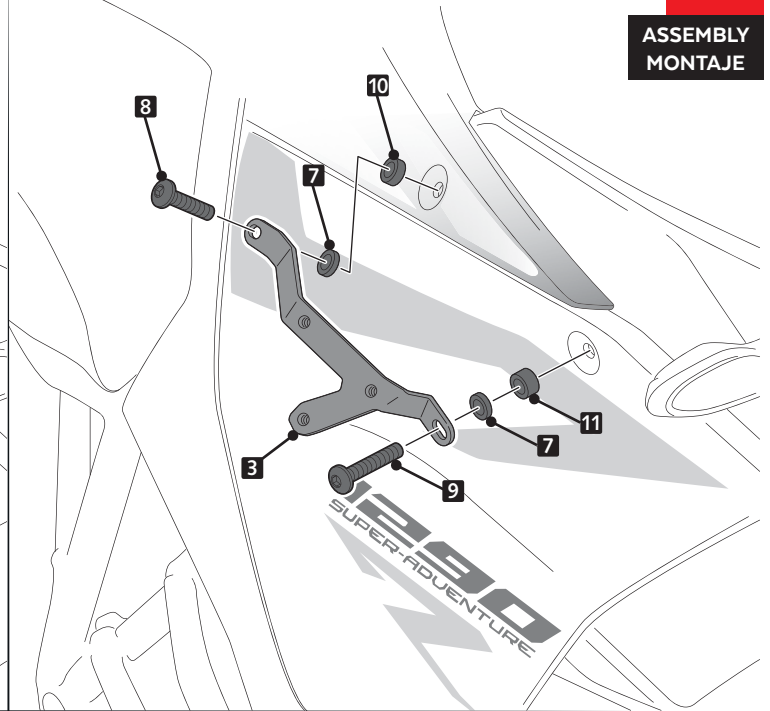


3

**ASSEMBLY
MONTAJE**

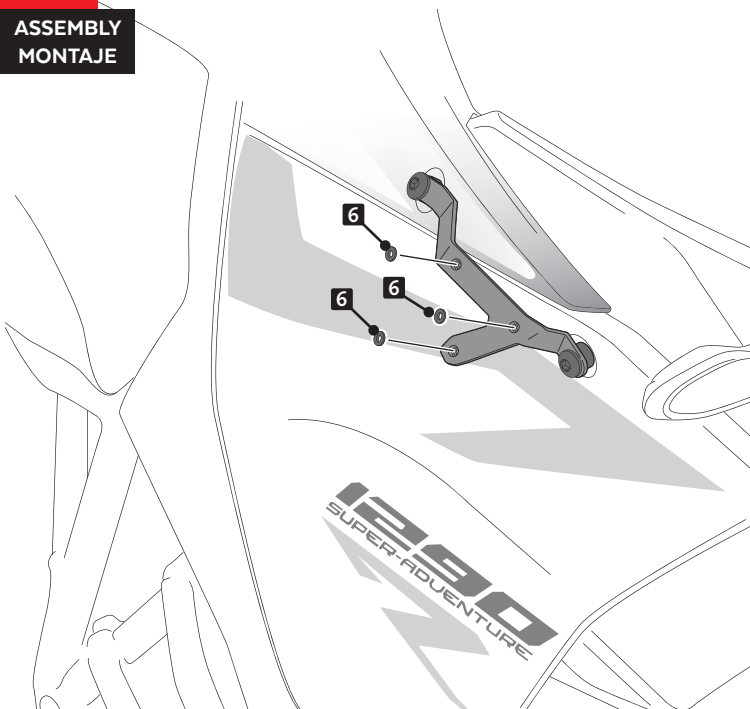

4

**ASSEMBLY
MONTAJE**

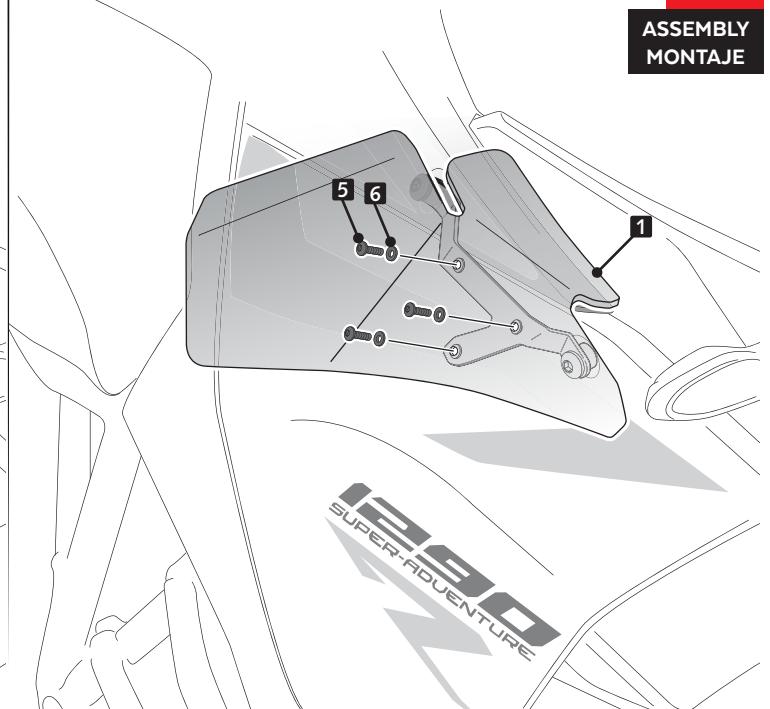


**KTM 1290 SUPER ADVENTURE-R-S-T '15- /
1190 ADVENTURE '13- / 1090 ADVENTURE-R '13- /
1050 ADVENTURE '15-**

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


5

**DISASSEMBLY
DESMONTAJE**

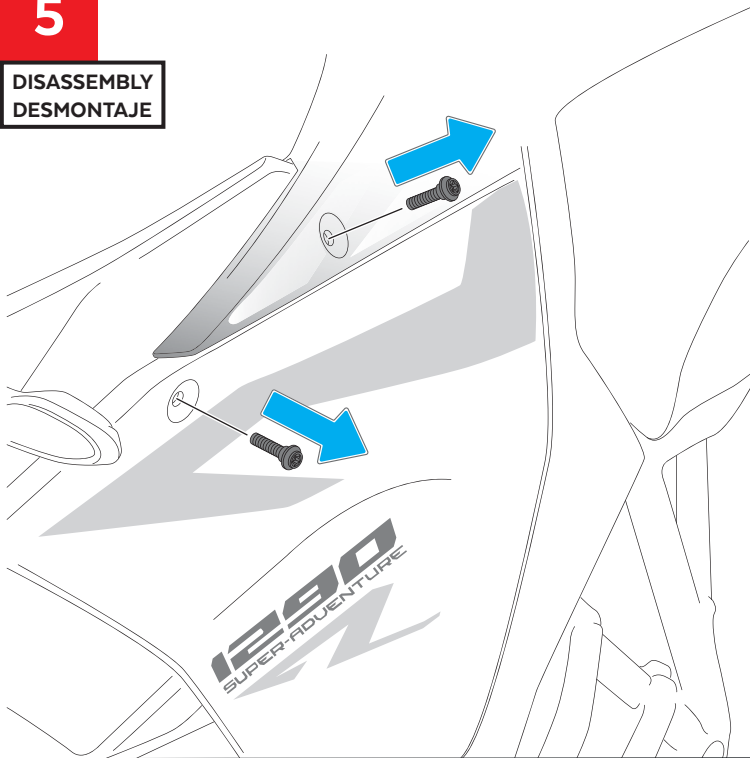


6

**ASSEMBLY
MONTAJE**

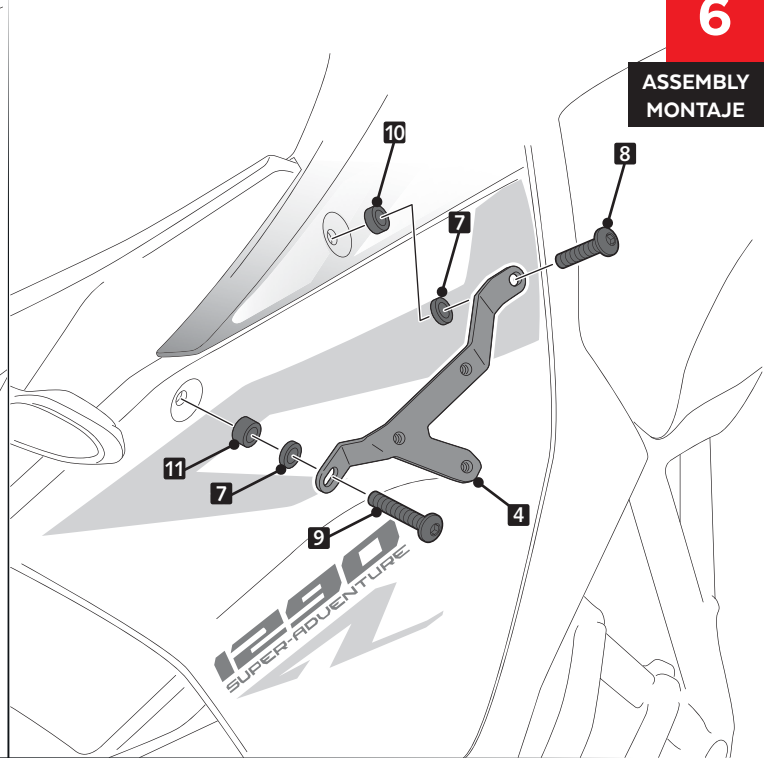

7

**ASSEMBLY
MONTAJE**

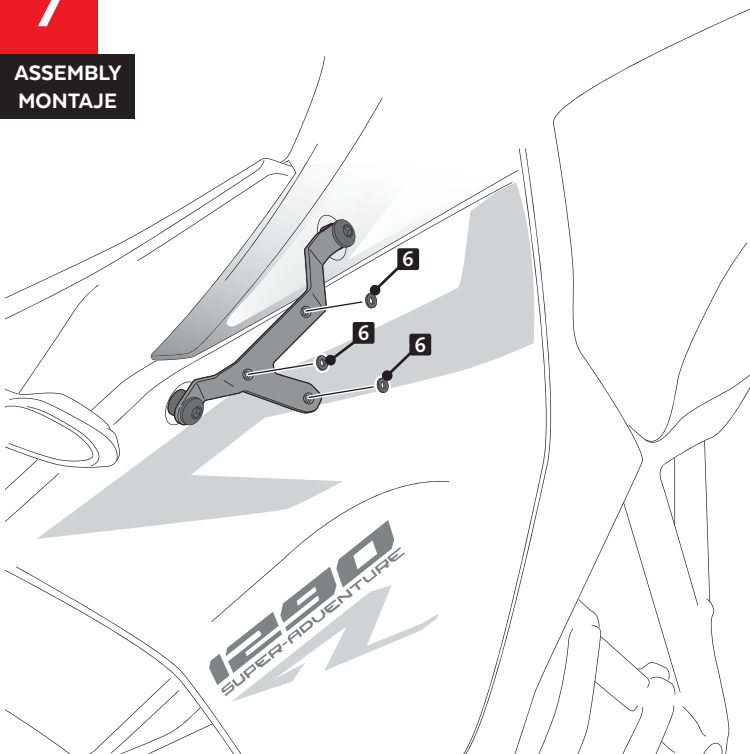

8

**ASSEMBLY
MONTAJE**

