

AX1797

Fast cleaning radiator guards

KTM / GasGas / Husqvarna


Assembling instructions

What's in the box ?

- 4 NE01-01-001 - TBHC 6x16mm screws
- 4 NE01-01-009 - TBHC 6x20mm screws
- 8 NE01-03-001 - M6 washers
- 1 PM01-07-084 - Blade n°84 - Outside right
- 1 PM01-07-085 - Blade n°85 - Middle right
- 1 PM01-07-086 - Blade n°86 - Inside right
- 1 PM01-07-087 - Blade n°87 - Outside left
- 1 PM01-07-088 - Blade n°89 - Middle left
- 1 PM01-07-089 - Blade n°89 - Inside left


The paper instructions may be limited, scan the QR code to watch the tutorial video online.

Approximate time of assembly: 15 minutes.

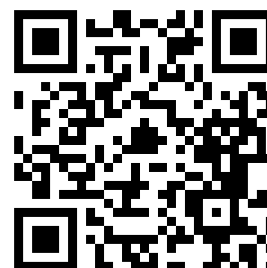

Radiator guards are made to protect the vital components of your bike and does not have a « life warranty ». If you notice a defect on your radiator guards at reception, please write to contact@axpracing.com


Off-road riding involves significant stresses and risks of impact on the motorcycle and its components. AXP Racing products are designed to improve protection and durability; however, they cannot be considered a foolproof guarantee against damage. AXP Racing accepts no liability for damage resulting from use, impact, or misuse.

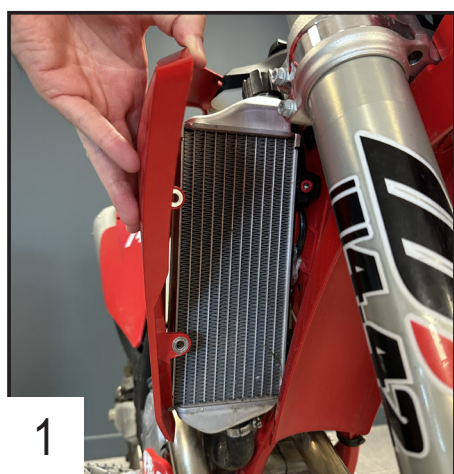

1

Remove the plastic wings and the 2 OEM screws.


Retirez les écopes en plastique et les 2 vis d'origine.

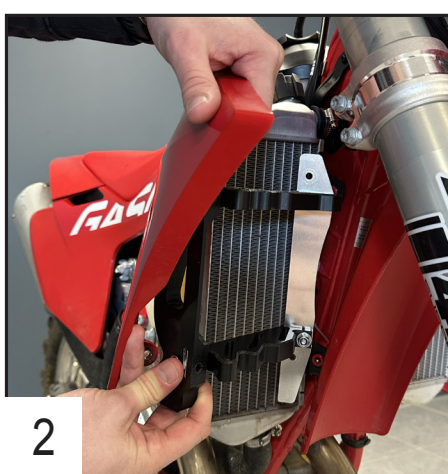

2

Place the guard in front of the radiator, the aluminum side must rest on the frame's side.


Placez la protection devant le radiateur, le côté en alu du côté du cadre.

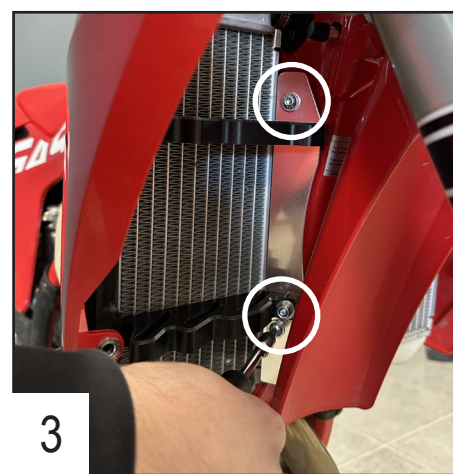

3

Use the OEM screws or 2 TBHC 6x16mm screws + M6 washers to fix the protection on the frame and tighten.


Utilisez les 2 vis d'origine ou 2 TBHC + 2 rondelles pour fixer la protection sur le cadre.

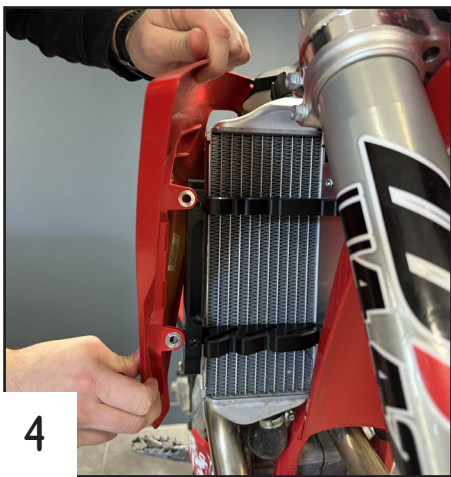

4

Make sure to place the side plastic in front of the guard.


Assurez-vous de mettre le plastique devant la protection.

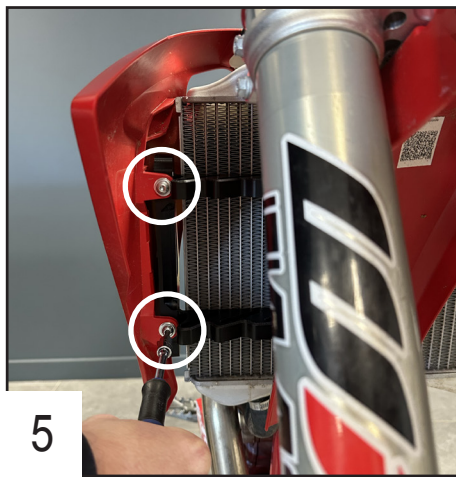

5

Use 2 TBHC 6x20mm screws + M6 washers to fix the guard on the outside and tighten.

Utilisez 2 vis + rondelles pour fixer la protection à l'extérieur et serrez.

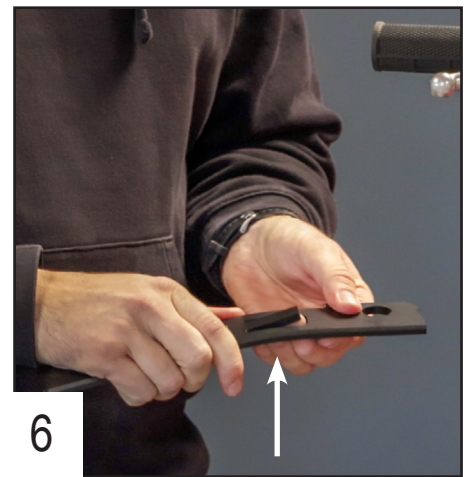

6

Make sure to push this part up so the wings don't come out while riding.


Assurez-vous de pousser cette petite partie avant d'insérer les lames pour éviter qu'elles partent.




7

Clip the wings in the structure. Make sure to place them in the correct order.

Clipsez les lames dans la structure. Placez-les dans le bon ordre.

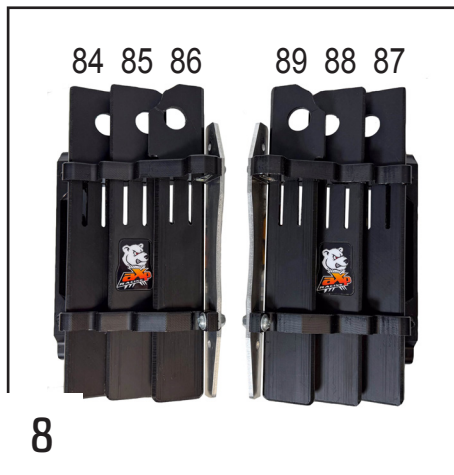

8

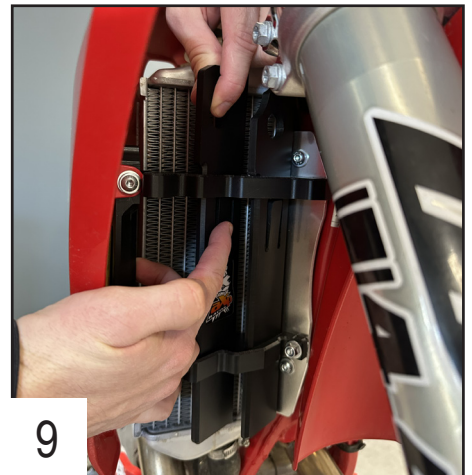

9

To remove the wings, push the small part and slide them out.

Pour retirer les lames, poussez la petite partie et tirez les vers le haut.



10

On the Husqvarna, you need to pull the side plastic to be able to remove the wings.

Sur les Husqvarna, il faut tirer sur les plastiques latéraux pour pouvoir retirer les lames.