

## Hinweis / Note

Erforderliche Arbeiten dürfen nur von entsprechend qualifizierten Personen durchgeführt werden. Lesen Sie diese Montageanleitung in Ruhe bis zum Ende bevor mit den Arbeiten begonnen wird. Diese Montageanleitung dient nur als Richtlinie und ist nicht für einen bestimmten Motorradtyp erstellt.

- Bitte verwenden Sie nur geeignetes Werkzeug.
- Achten Sie auf einen sicheren Halt des Motorrads während der Arbeiten.
- Eine zusätzlicher Helfer erleichtert die Montagefähigkeit.

Therefore, any necessary work may only be carried out by appropriately qualified persons. Please read these assembly instructions in full before beginning work. These instructions are intended as a general guide and are not specific to any particular type of motorcycle.

- Use only suitable tools.
- Ensure that the motorcycle is held securely during work.
- An additional assistant simplifies the assembly process.

## Achtung / Caution



Nach erfolgter Montage bei vollem Lenkeinschlag prüfen, ob hydraulische Leitungen und Kabel weder spannen noch scheuern. Es ist ggf. notwendig, die Leitungen zu verlängern. Passende Adapter erhalten Sie bei uns.

Der feste Sitz der Bauteile sollte regelmäßig überprüft werden. Sollte ein Bauteil Beschädigungen aufweisen, muss dieses umgehend ersetzt werden.

Irrtümer & Änderungen vorbehalten. Kein Anspruch auf Richtigkeit. Bei Fragen oder Unsicherheiten beim Anbau wenden Sie sich bitte an unseren Support oder einen qualifizierten & zertifizierten Zweiradmechaniker. Keine Haftung für Schäden durch unsachgemäße Montage.

After installation, check that the hydraulic lines and cables are neither under tension nor chafing when the steering wheel is fully turned. It may be necessary to extend them. You can obtain suitable adapters from us.

However, a regular check of the tight fit of the components must be ensured. If a component shows signs of damage, it must be replaced immediately.

Subject to errors and changes. No claim to accuracy. For questions or uncertainties during installation, please contact our support team or a qualified and certified motorcycle mechanic. No liability for damages caused by improper installation.

# LENKERERHÖHUNG HANDLEBAR RISER

Art.Nr./Item-no.:

4235-F25Z-25-0-BL

Erhöhung 25mm / Lenker Ø28,6mm  
Raise 25mm / Handlebar Ø28,6mm



## Inhalt / Content

2x Lenkererhöhung	2x handlebar riser
4x Innensechskantschraube M8x55	4x allen screw M8x55
2x Halter für Frontmaske	2x Holder for front mask
2x Schrauben M6x10	2x Screws M6x10
1x Kabelbinder	1x Cable tie
Allgemeine Betriebserlaubnis	product certificate



081125/020326

M25230

## Montageanleitung / Installation Instruction

Montage Abb. A1

Windschild, Display und Lenker demontieren. Den Kabelbaum des Displays lösen, etwas hochziehen und ggf. Isolierband lösen, dann mit Schritt 1 fortfahren.


1. Lenkererhöhungen einsetzen
2. Lenker einsetzen
3. Obere Lenkerklemmung auflegen und Lenker ausrichten
4. Schrauben M8x55 einsetzen und zuerst Schrauben in Fahrtrichtung vorne festziehen (**23 Nm**), dann Schrauben in Fahrtrichtung hinten festziehen (**23 Nm**), Es entsteht ein Spalt (Abb. A2)
5. Display aufsetzen
6. Halteadapter Display/Frontmaske ansetzen
7. Orig. Schrauben M6 festziehen (**6 Nm**)
8. Halteadapter Display/Frontmaske an Frontmaske verschrauben M6x10 (**6 Nm**)
9. Windschild montieren

Assembly Fig. A1


First remove the windscreen, display and handlebar. Detach the wiring harness of the display, pull it up slightly and remove insulating tape if necessary, then continue with step 1.

1. Insert handlebar risers
2. Insert handlebar
3. Place the upper handlebar clamp and align the handlebar
4. Insert the M8x55 bolts, first tighten the bolts in the front direction of travel (**23 Nm**), then tighten the screws in the rear direction of travel (**23 Nm**). A gap is created (Fig. A2)
5. Fit the display
6. Attach the display/front mask support
7. Tighten original M6 screws (**6 Nm**)
8. Screw the display/front mask support to the front mask M6x10 (**6 Nm**)
9. Mount windscreen

**A1**

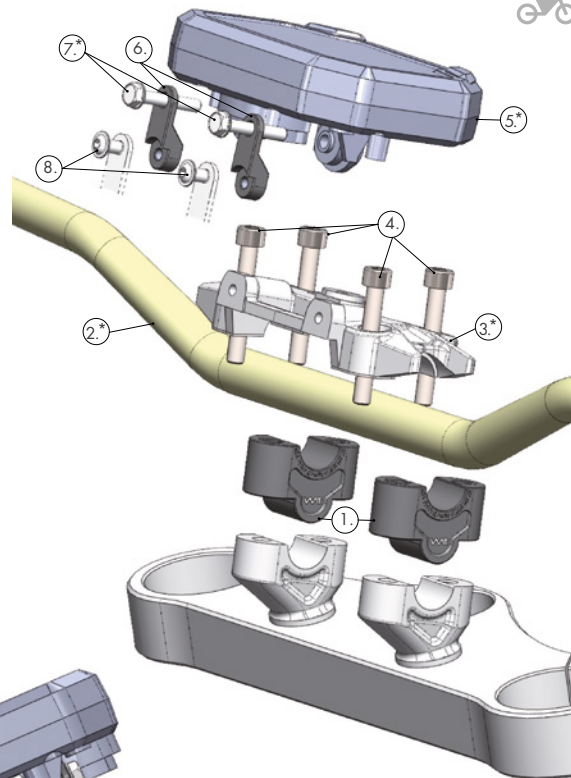

**A2**

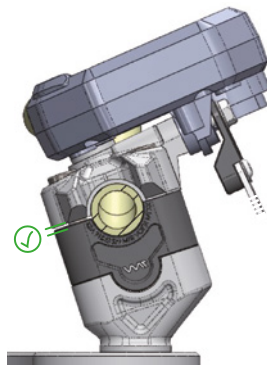

\* Originalteile verwenden  
\* Use original parts

**HEPCO & BECKER**