



AX1841

Coober exhaust special kit
KTM 390 Adventure R / Enduro R

Assembling instructions

What's in the box ?

- 1 PM03-04-151 - Aluminum front fixation (a)
- 1 PM01-04-330 - Left front fixation (b)
- 1 PM01-04-331 - Right front fixation (c)
- 2 NE01-02-002 - TFHC 6x20mm screws
- 2 NE01-03-001 - M6 washers
- 2 NE01-04-003 - EM6F bolts
- 2 NE01-04-002 - Clamped bolts



The paper instructions may be limited, scan the QR code to watch the tutorial video online.





Approximate time of assembly: 15 minutes.

Skid plates are made to protect the vital components of your bike and does not have a « life warranty ». If you notice a defect on your skid plate at reception, please write to contact@axpracing.com

Off-road riding involves significant stresses and risks of impact on the motorcycle and its components. AXP Racing products are designed to improve protection and durability; however, they cannot be considered a foolproof guarantee against damage. AXP Racing accepts no liability for damage resulting from use, impact, or misuse.




Follow the steps

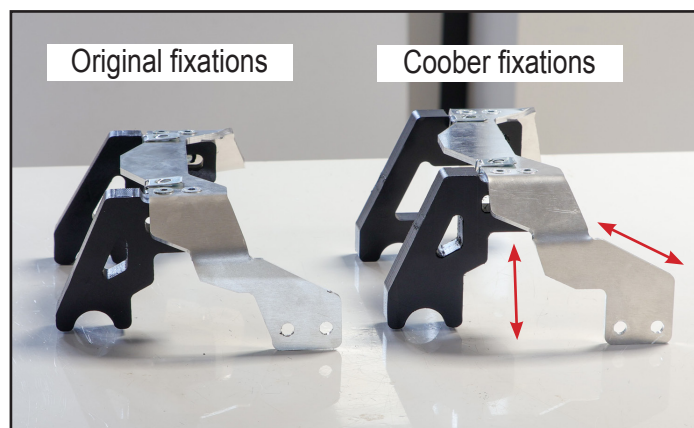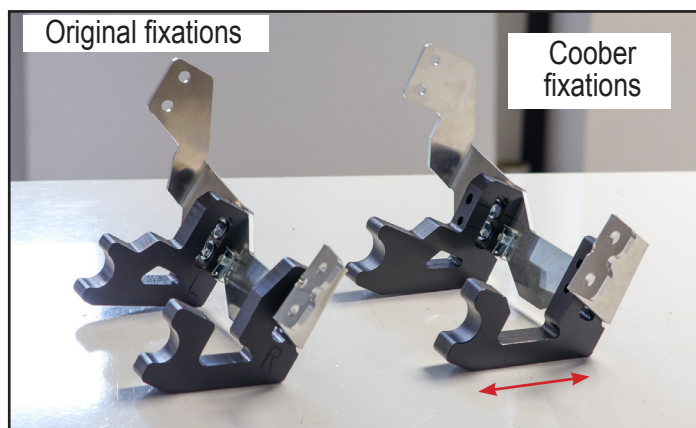

If you have the Coober exhaust, you need to use this special kit with an adapted front fixation. The aluminum and plastic parts are longer than the original fixation system to make the skid plate compatible with Coober.

Si vous avez un échappement Coober, vous devez utiliser ce kit spécial avec une fixation avant adaptée. Les pièces en aluminium et en plastiques sont plus longues que celles du système de fixation d'origine afin de rendre le sabot compatible.

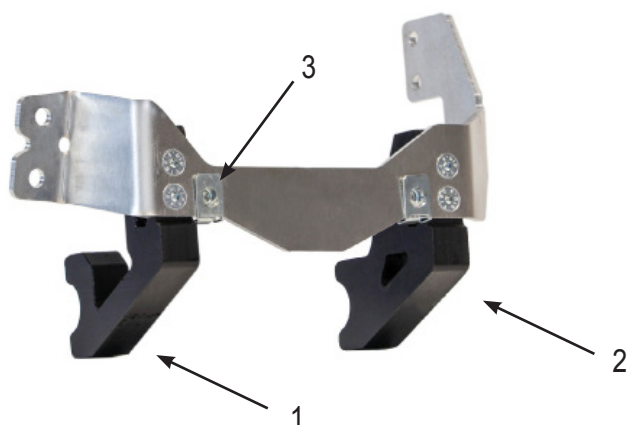

1/ Place the right fixation (c) using 2 TFHC 6x20mm screws + M6 washers and bolts, then tighten.

Placez la fixation avant droite en utilisant 2 vis + rondelles et écrous, puis serrez.

2/ Place the left fixation (b) using 2 TFHC 6x20mm screws + M6 washers and bolts, then tighten.

Placez la fixation avant gauche en utilisant 2 vis + rondelles et écrous, puis serrez.

3/ Place 2 clamped bolts on the aluminum part (a).
Placez 2 écrou-pinces sur la fixation en aluminium.



Place the front fixation on the bike and continue the normal skid plate installation.

Placez la fixation sur la moto et continuez avec l'installation normale du sabot.