

BMW R1250R '19-

M O U N T I N G I N S T R U C T I O N S

REF 3624

WINDSHIELD NEW GENERATION SPORT





TORX

T25
T40

ALLEN

Nº 3
Nº 6

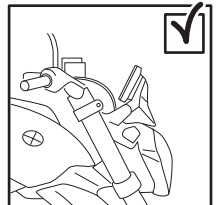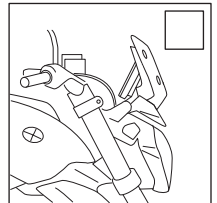


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula sport	Sport Screen	1	3623F/H/N/WM3
2		Soporte metálico derecho (R)	Right metal support (R)	1	SOPOR2P2-R-3625
3		Soporte metálico izquierdo (L)	Left metal support (L)	1	SOPOR2P2-L-3625
4		Tornillo M8x30 DIN912	M8x30 DIN912 Allen screw	2	TORNI-D912--575
5		Casquillo Ø8,5x Ø14x 12	Ø8,5x Ø14x 12 arrowhead	2	CASQUI-----0083
6		Tornillo M8x55 DIN912	M8x55 DIN912 Allen screw	2	TORNI-D912--631
7		Casquillo Ø8,5x Ø14x 30	Ø8,5x Ø14x 30 arrowhead	2	CASQUI-----149
8		Silentblock Ø9 x Ø6 x8mm	Ø9 x Ø6 x8mm silentblock	4	AROPASACABLES-3
9		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 bush with flange	4	CASQUI-1A---750
10		Tornillo M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
11		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Allen cap screw	4	TAPON-----85

BMW R1250R '19-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

**DISASSEMBLY
DESMONTAJE**

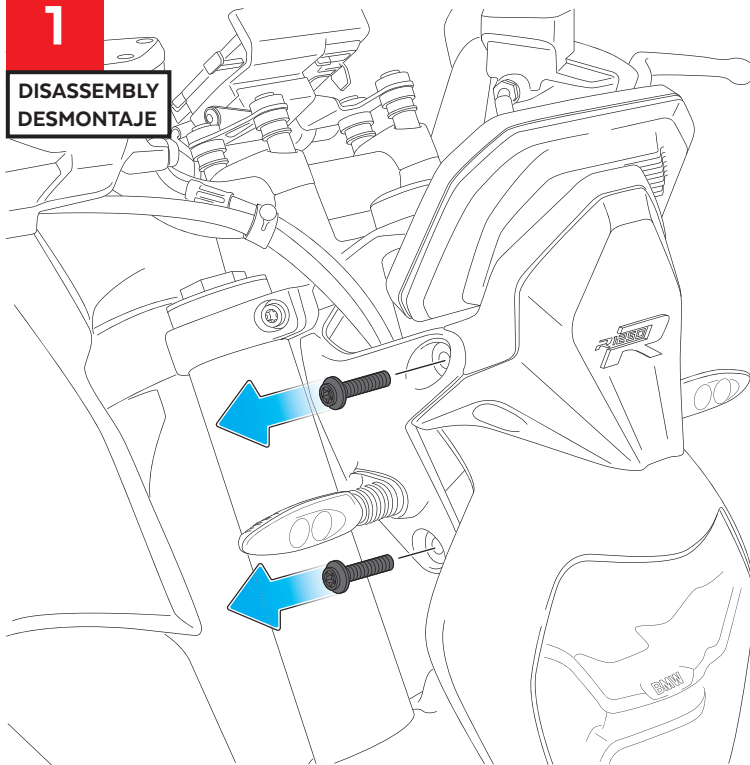


2

**ASSEMBLY
MONTAJE**

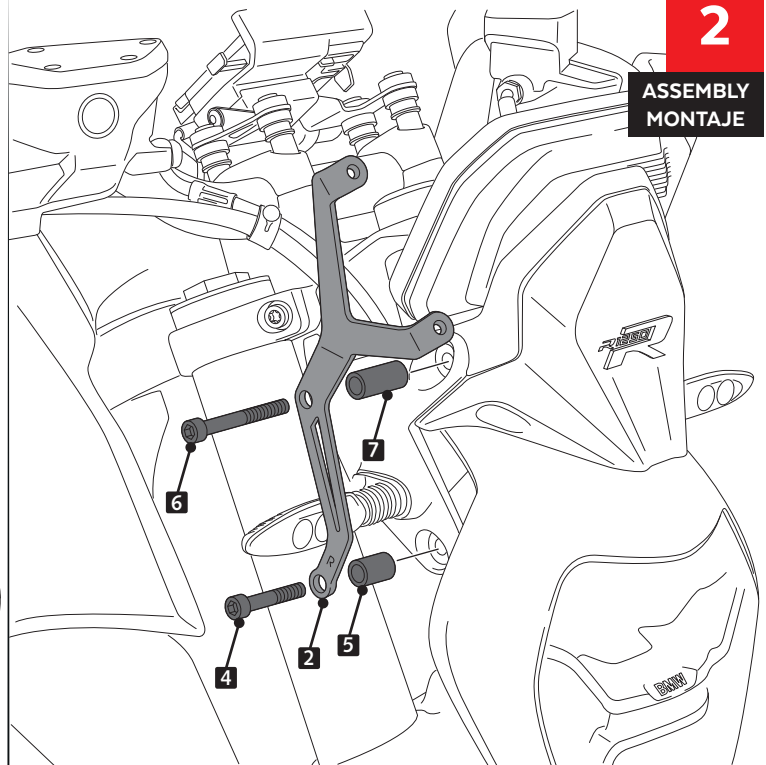


3

**DISASSEMBLY
DESMONTAJE**

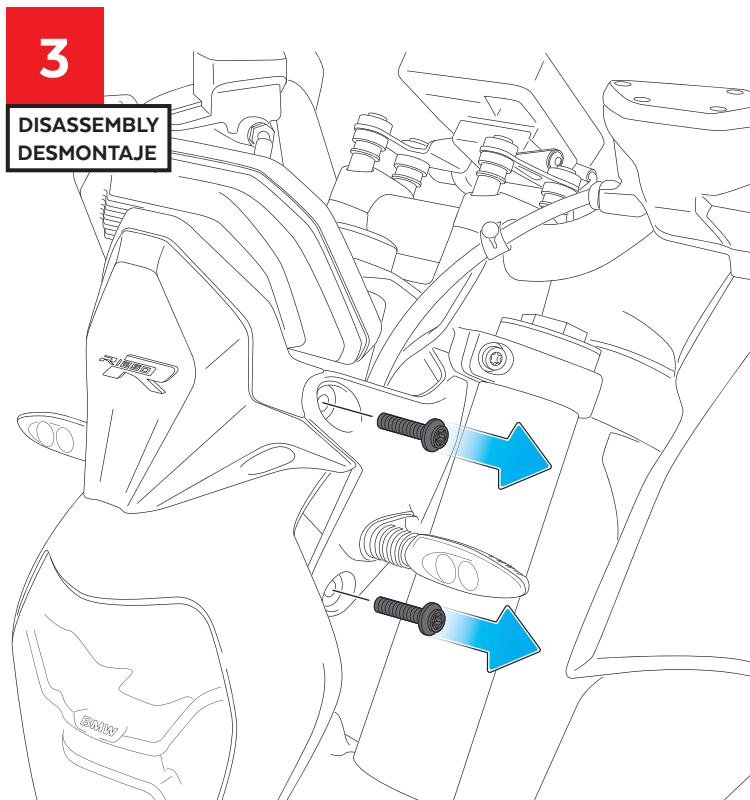

4

**ASSEMBLY
MONTAJE**

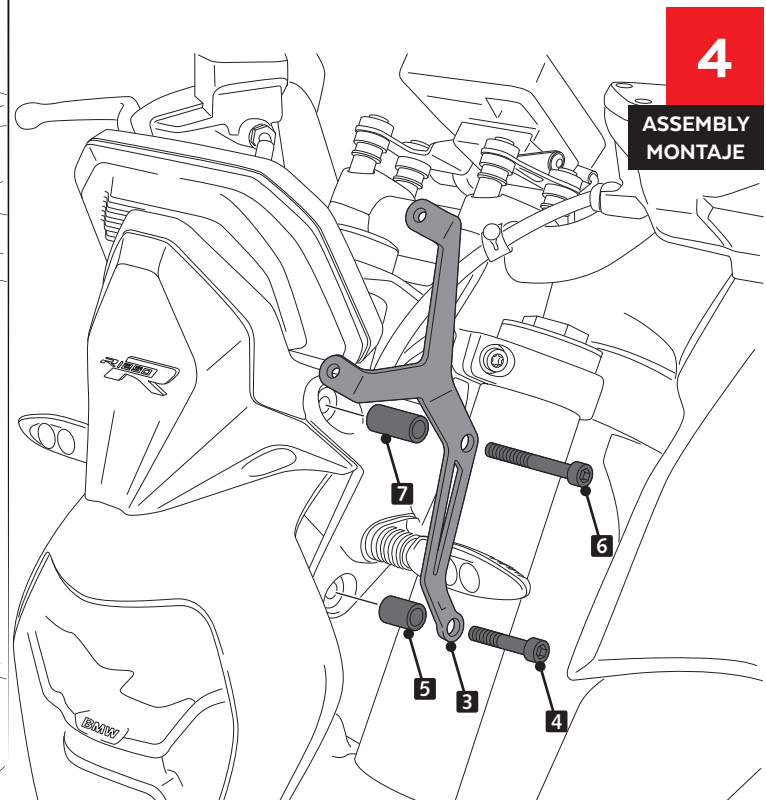

BMW R1250R '19-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

5

ASSEMBLY
MONTAJE

