

# SUZUKI SV650 '16-

## M O U N T I N G I N S T R U C T I O N S

**REF 3169**

**SEMI-FAIRING RETRO (BLACK)**

**REF 3170**

**SEMI-FAIRING RETRO (CARBON LOOK)**



1 Person



20 min



EASY




N° 10  
N° 12



ALLEN

N° 2,5  
N° 3


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula	Screen	1	9196 F/H/N/WM3
2		Carcasa ABS	Semi-fairing Retro	1	10647J/C
3		Soporte metálico derecho ( R )	right metal support ( R )	1	SOPOR-3P-3-3169
4		Soporte metálico izquierdo ( L )	left metal support ( L )	1	SOPOR-3P-3-3169
5		Soporte inferior	Lower support	1	SOPOR-3P-3-3169
6		Silentblock M4	M4 silentblock	5	SILENBTM4---062
7		Tornillo Allen M4x16 ISO 7380	M4x16 ISO7380 Allen screw	5	TORNIAI7380-310
8		Arandela nylon M4x0,5	M4x0,5 nylon washer	5	ARNV00000000311
9		Silentblock M5	M5 silentblock	3	SILENBTM5-046/1
10		Tornillo Allen M5x16 ISO 7380	M5x16 ISO 7380 Allen screw	3	TORNI-I7380-493
11		Arandela de nylon M5x1	M5x1 Nylon washer	3	ARNV000000000245
12		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Allen screw cap	3	TAPON-----85
13		Separador de silicona Ø12,5 x 4	Ø12,5 x 4 silicon separator	2	TOPE-PA12,7X3,5
14		Kit adhesivos	Sticker set	1	10590

# SUZUKI SV650 '16-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

DISASSEMBLY  
DESMONTAJE

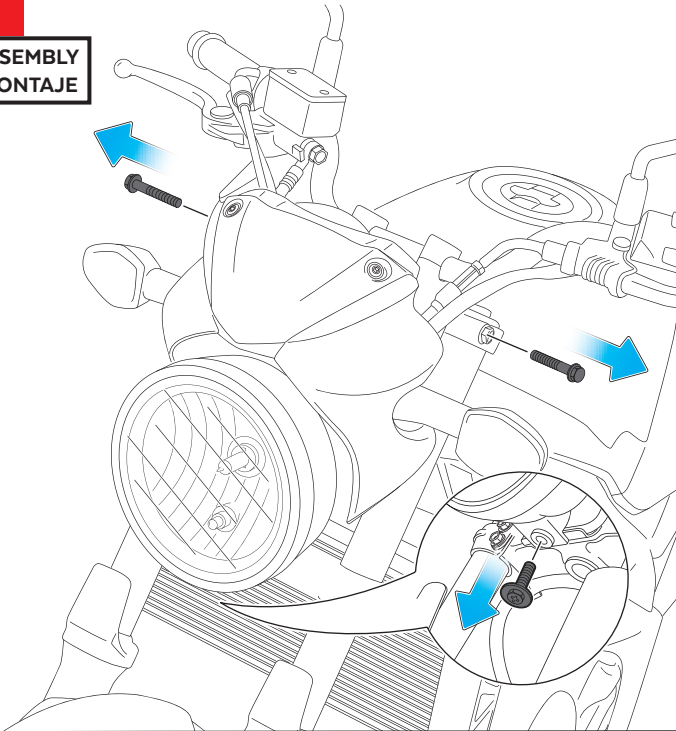


**2**

ASSEMBLY  
MONTAJE

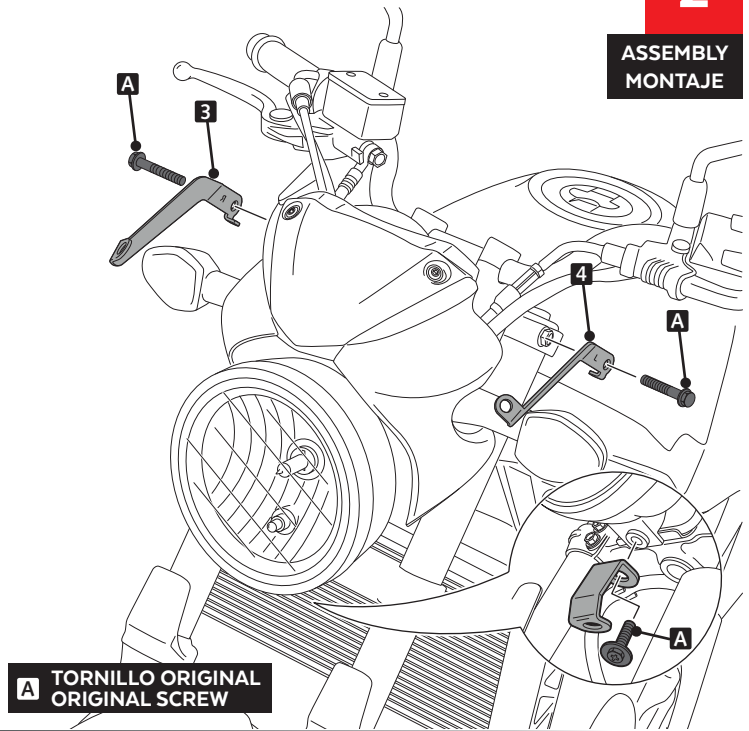


**3**

ASSEMBLY  
MONTAJE

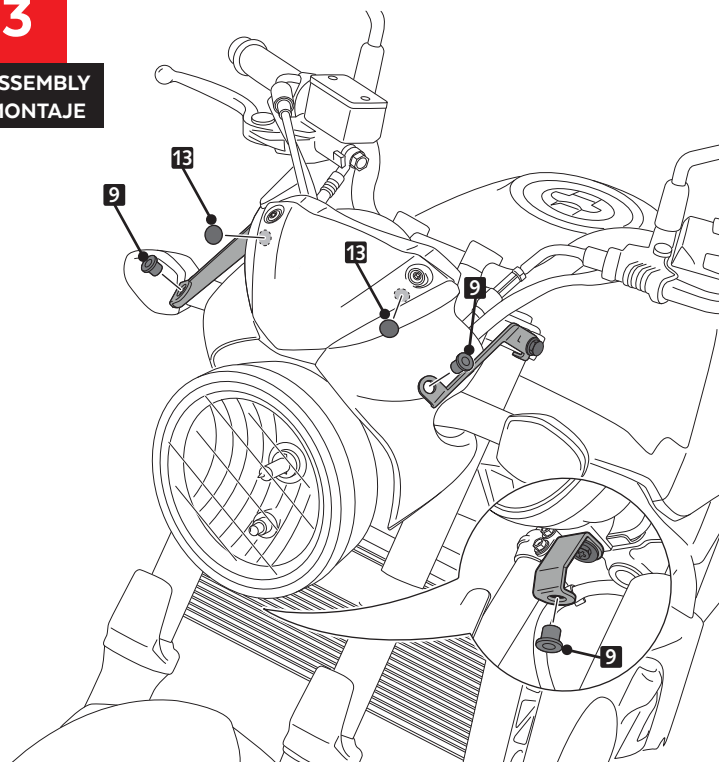

**4**

ASSEMBLY  
MONTAJE

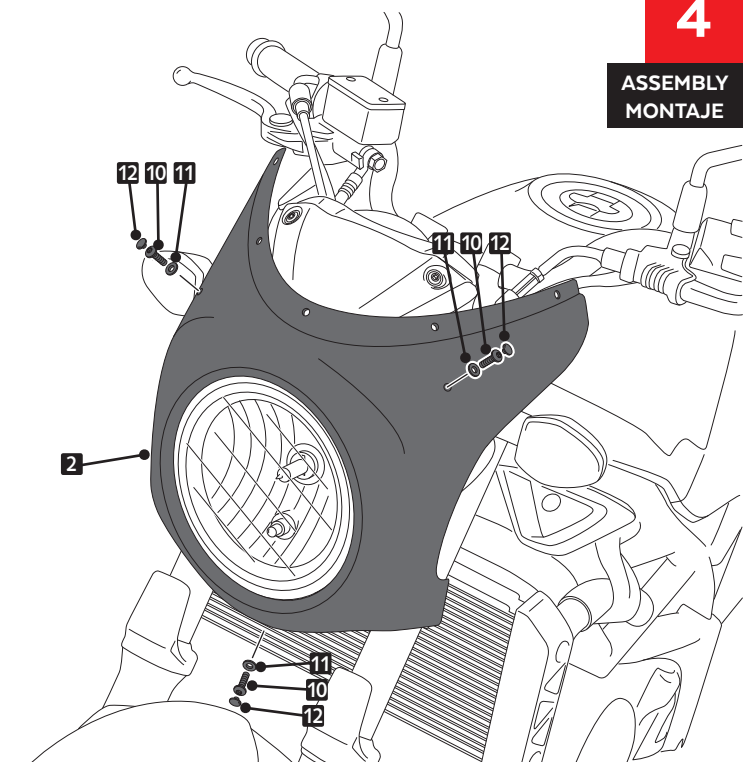


# SUZUKI SV650 '16-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**5**

ASSEMBLY  
MONTAJE

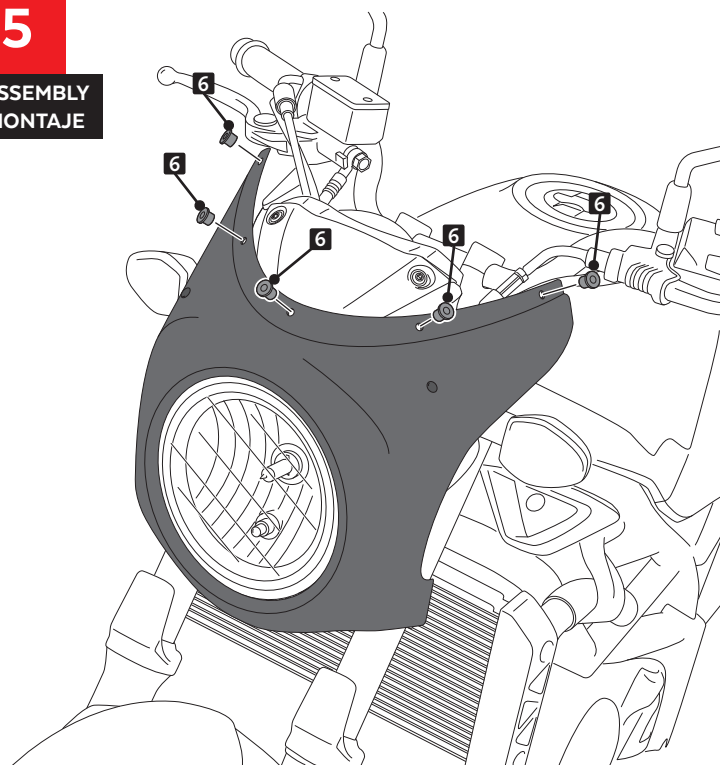


**6**

ASSEMBLY  
MONTAJE

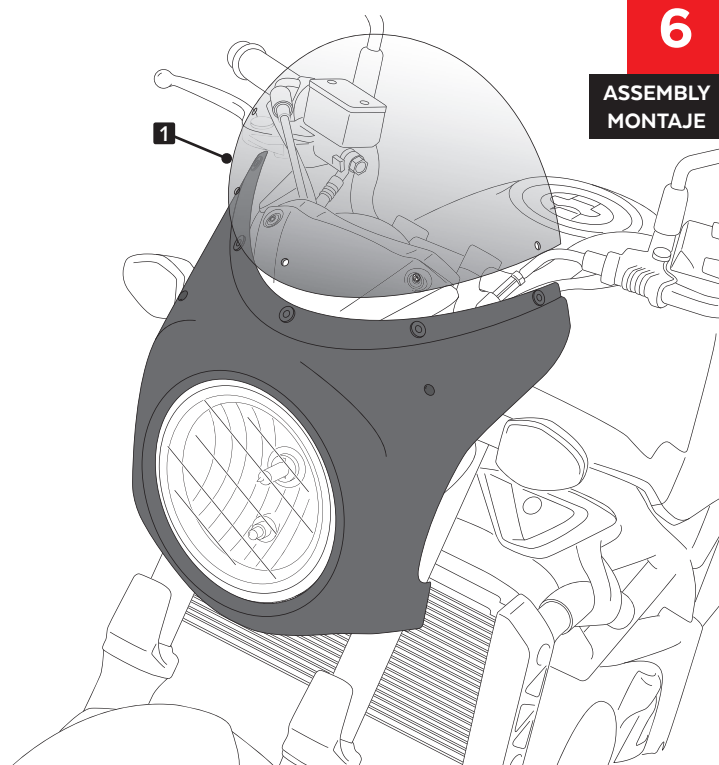

**7**

ASSEMBLY  
MONTAJE

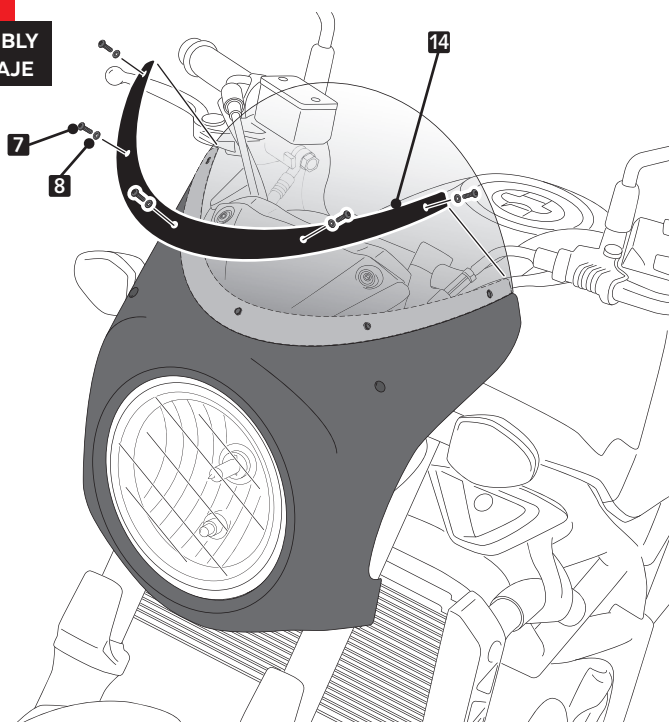

**8**

ASSEMBLY  
MONTAJE

